## **Round or Square Type Chicago Plenum Down Light Housing** with Toroidal Transformer for Flanged Trims

E3 F -HDCM




### **GENERAL PRODUCT INFORMATION:**

Installation Instructions for

This product can be dimmed with a low-voltage magnetic dimmer.

This instruction shows a typical installation.

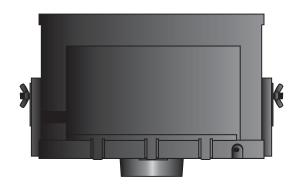


#### **CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.


# Install the Housing with Adjustable Bars

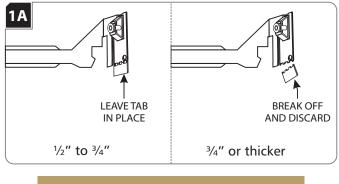

NOTE: Skip this section if installing the housing with butterfly brackets.

#### • Keep Tab for ceiling ½" to ¾" thick.

When using adjustable hanger bars with 1/2" to 3/4" thick ceilings, leave the tab of the hanger bars in place. Break off Tab for ceiling <sup>3</sup>/<sub>4</sub>" or thicker. When using adjustable hanger bars with 3/4" or thicker ceilings, remove the tab by bending it at the perforation.

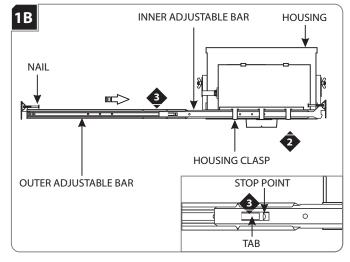




2 Slide the inner adjustable bar completely through the three housing clasps. Make sure the nail is on top.

3 Slide and push the outer adjustable bar completely onto the inner adjustable bar so that the tab clicks into place behind the stop point. This will prevent the adjustable bars from coming apart.


Repeat steps 2 & 3 for the other side of the housing.

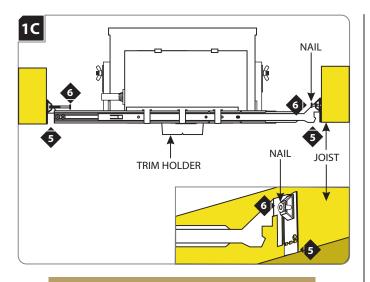

NOTE: The adjustable bars can be mounted to joists that are spaced 16" - 24" apart.

5 Align the bottom of the end plates with the bottom of the ceiling joists.

6 Level the adjustable bars and, with a hammer, tap the nails completely into the joists to secure the adjustable bars in place.

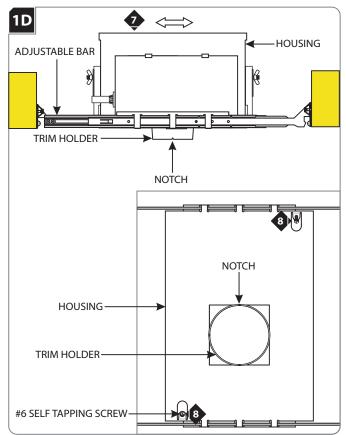


Adjust the trim holder position (horizontal position) by sliding the housing on adjustable bars.


8 When the desired location is achieved, tighten the two #6 self tapping screws to lock the housing onto the adjustable bars.

> **TIP:** Notches in trim holder can be used to align multiple housings using a laser or string.

## Install the Housing with Butterfly **Brackets**

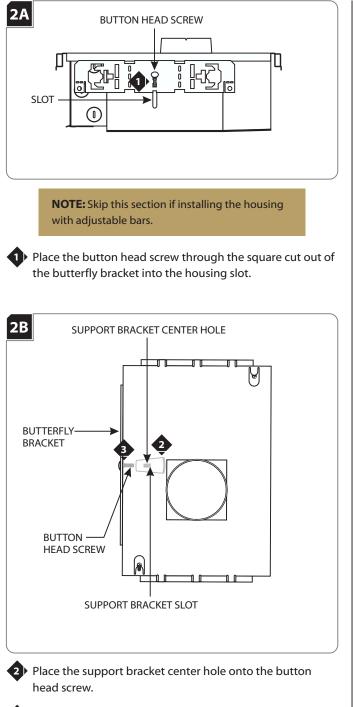

3 Push the support bracket slots against the butterfly bracket tabs.

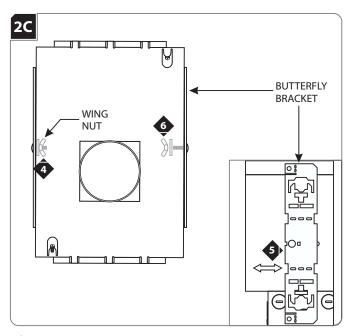



Attach the wing nut loosely to the button head screw.

5 Slide the butterfly bracket up or down to achieve the proper location. Tighten the wing nut to secure the butterfly bracket in place.





6 Repeat steps 1-5 for the other butterfly bracket.

• Use the butterfly brackets to install the housing in accordance with local building and electrical codes.


> **NOTE:** Notches in trim holder can be used to align multiple housings using a laser or string.

### **Connect Power to the Housing**

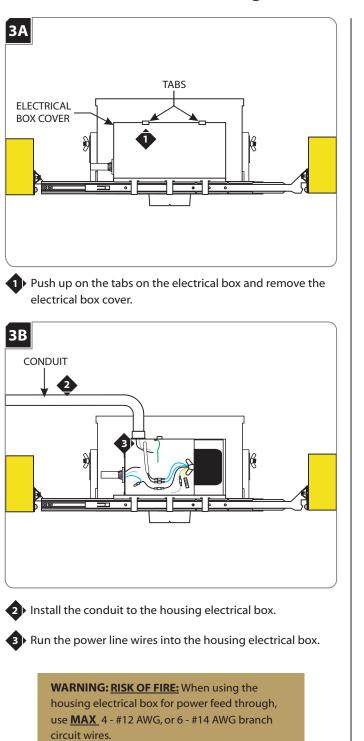

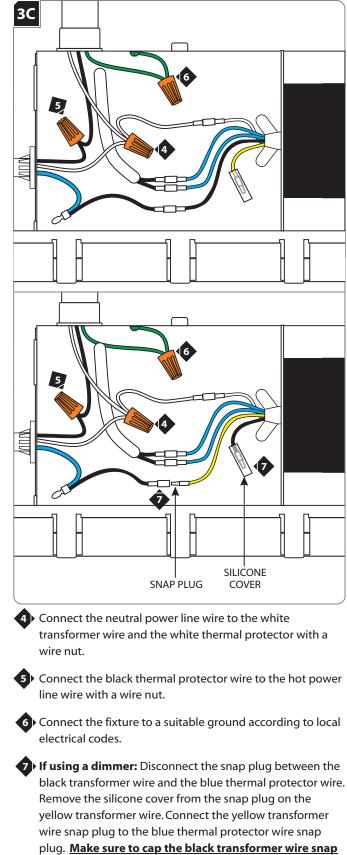


plug with the silicone cover.

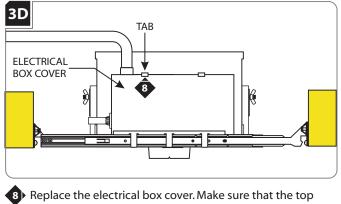


edge of the cover snaps under the tab.


## **Install the Lamp & Lens Accessories**

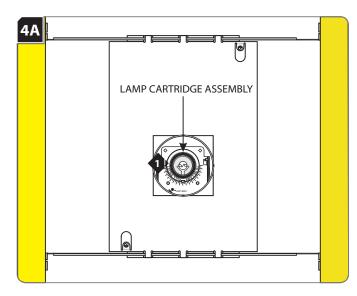

Pull the snoot to remove the lamp cartridge assembly.

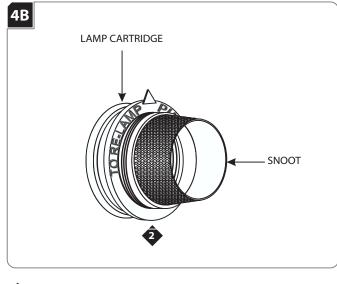





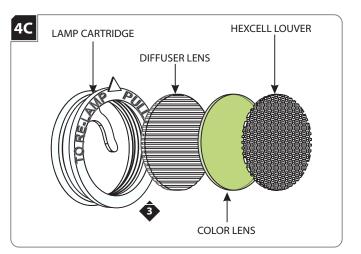





3 Place a maximum of three accessories (optional) into the lamp cartridge.

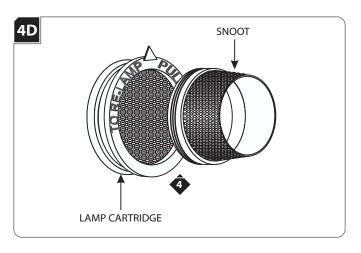




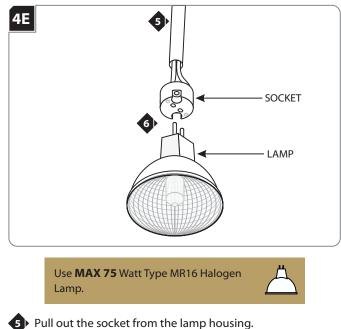




Push the lamp pins completely into the socket holes.

6

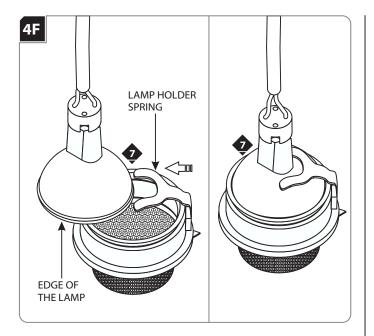

Slide the lamp holder spring completely onto back of the MR16 lamp so that the edge of the lamp snaps into the lamp cartridge assembly.

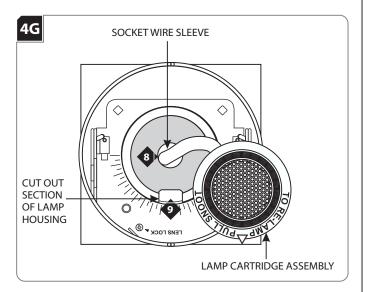




8 Feed the socket wire sleeve back into the lamp housing.


 Align the arrow indicator on the lamp cartridge assembly with the cut out section of the lamp housing. Push to snap the lamp cartridge assembly into the lamp housing.

**NOTE:** Before installing drywall, it is recommended to power up and run the Element fixture(s) for 10 minutes to make sure that all electrical connections are tight and secure.

## Install Drywall or Suspended Ceiling

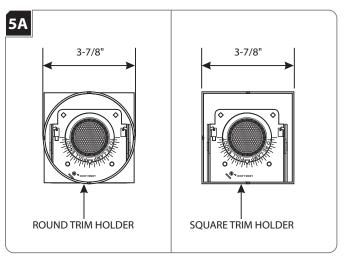

 For round trims, mark a 3-7/8" diameter circle on drywall. Cut out the marked section.
For square trims, mark a 3-7/8" square on drywall. Cut out the marked section.

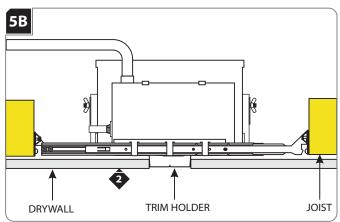

Align the cut out section of drywall with the trim holder and install the drywall.

**WARNING:** <u>Risk of Fire:</u> The housing is not intended to be in contact with or covered with combustible materials and insulation. Do not install insulation within 3 inches of the housing sides or above in such a manner to entrap heat.

# Notes:

### **SAVE THESE INSTRUCTIONS!**



7400 Linder Ave, Skokie, IL 60077 847.410.4400

#### www.element-lighting.com

© 2015 Tech Lighting, L.L.C. All rights reserved. The "Element" graphic is a registered trademark of Element. Element reserves the right to change specifications for product improvements without notification. A Generation Brands Company